

# Product Bulletin

## Residential Safety Bottom Brackets & Residential Adjustable Spring Anchor Brackets

Helton Industries is pleased to introduce several key safety improvements to our Residential Bottom Brackets and Residential Adjustable Spring Anchor Bracket.

Leading the way for safety and convenience is our new Residential Bottom Bracket with Removable Roller Carrier. Features include pre-attached warning labels, removable roller carriers, and a new tamper resistant tab system that prevents bracket removal while under tension. Special consideration has been given to the roller carrier design for improved roller position and pull rope attachment. Please contact your sales representative for more information or to upgrade to this bracket.

For those who do not require a removable roller carrier, we have upgraded our existing Residential Bottom Bracket to now include the pre-attached warning labels and the new tamper resistant tab system.

To complete the safety upgrades, we now include pre-attached warning labels on our Residential Adjustable Spring Anchor Brackets.



Residential Bottom Bracket 13ga c/w Tamper Resistant Tabs, Safety Label and Removable Roller Carriers



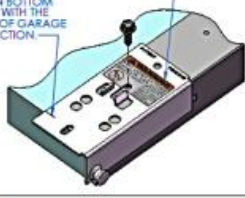
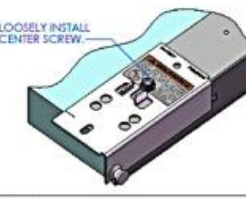

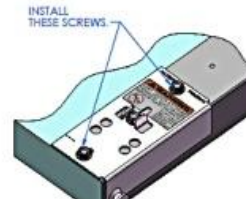
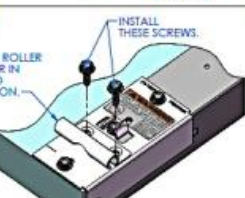
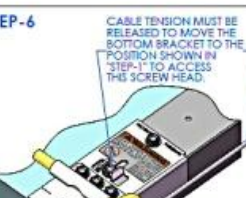

Residential Adjustable Spring Anchor Bracket 13Ga – c/w Safety Label




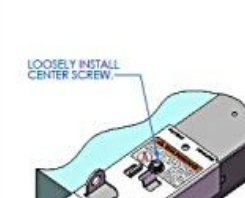




Residential Bottom Bracket disassembled to show multiple mounting points and slots for pull rope access



Residential Bottom Bracket 13ga c/w Tamper Resistant Tabs and Safety Label

SAFETY BOTTOM BRACKET INSTALLATION INSTRUCTIONS FOR BKT-RES-13-SBB-RRC			
<b>STEP-1</b> ALIGN THE SCRIBE MARK ON BOTTOM BRACKET WITH THE BOTTOM OF GARAGE DOOR SECTION. 	<b>STEP-2</b> LOOSELY INSTALL CENTER SCREW. 	<b>STEP-3</b> KNOCK THE BOTTOM BRACKET UPWARDS TO MAKE THE BOTTOM OF THE BOTTOM BRACKET FLUSH WITH THE DOOR SECTION. 	<b>STEP-4</b> INSTALL THESE SCREWS. 
<b>STEP-5</b> INSTALL ROLLER CARRIER IN DESIRED LOCATION. 	<b>STEP-6</b> CABLE TENSION MUST BE RELEASED TO MOVE THE BOTTOM BRACKET TO THE POSITION SHOWN IN STEP-1 TO ACCESS THIS SCREW HEAD. MOUNT THE ROLLER AS SHOWN. 		

Installation instruction sheet available for the Residential Bottom Bracket with Removable Roller Carrier

SAFETY BOTTOM BRACKET INSTALLATION INSTRUCTIONS FOR BKT-RES-13-SBB			
<b>STEP-1</b> ALIGN THE SCRIBE MARK ON BOTTOM BRACKET WITH THE BOTTOM OF GARAGE DOOR SECTION. 	<b>STEP-2</b> LOOSELY INSTALL CENTER SCREW. 	<b>STEP-3</b> KNOCK THE BOTTOM BRACKET UPWARDS TO MAKE THE BOTTOM OF THE BOTTOM BRACKET FLUSH WITH THE DOOR SECTION. 	<b>STEP-4</b> INSTALL THESE SCREWS. 
			

Installation instruction sheet available for the Residential Bottom Bracket



Est. 1981 **North America's Choice for Quality Overhead Door and Window Products**

30840 Peardonville Road  
Abbotsford, BC V2T 6K2  
Canada

PO Box 8000 PMB 435  
Sumas, WA 98295-8000  
USA

Tel: 604-854-3660  
Fax: 604-854-3576  
www.heltonindustries.com